



LAY5-EV164



LAY5-EV443



LAY5-EV175



LAY5-EA131



LAY5-EA145

Description	Contact	Circuit	Color	Type	Contour
For use with incandescent bulb (included) BA9s base fitting	130V/50/60Hz		Green	LAY5-EV133	
			Red	LAY5-EV134	
			Yellow	LAY5-EV135	
	230v 50V/60Hz 220V/240V built		White	LAY5-EV161	
			Green	LAY5-EV163	
			Red	LAY5-EV164	
For use with incandescent bulb (included) BA9s base fitting	1230V 50/60Hz 220/240V built		Yellow	LAY5-EV165	
			Blue	LAY5-EV166	
			White	LAY5-EV441	
	Regulator directly		Green	LAY5-EV443	
			Red	LAY5-EV444	
			Yellow	LAY5-EV445	
For use with incandescent bulb (included) BA9s base fitting With resistor	380V 50/60Hz 280/415V built		Blue	LAY5-EV446	
			Green	LAY5-EV453	
			Red	LAY5-EV454	
	230v 50V/60Hz 220V/240V built		Yellow	LAY5-EV455	
			White	LAY5-EV171	
			Green	LAY5-EV173	
Push button spring return	N/O		Red	LAY5-EV174	
			Yellow	LAY5-EV175	
			Blue	LAY5-EV176	
	N/C		Black	LAY5-EA121	
			Green	LAY5-EA133	
			Green Start	LAY5-EA131S	
Push button spring return	N/O		Yellow	LAY5-EA151	
			Blue	LAY5-EA101	
			Red	LAY5-EA142	
	N/O + N/C		Red Stop	LAY5-EA142S	
			Black	LAY5-EA125	
			Green	LAY5-EA135	
Push button spring return	N/O + N/C		Red	LAY5-EA145	
			Yellow	LAY5-EA155	



LAY5-EH121



LAY5-EA51



LAY5-EA42



LAY5-EA35



LAY5-EP31




LAY5-EP42

	N/O		- Black - Green - Yellow	LAY5-EH121 LAY5-EH131 LAY5-EH151
Push button spring return	N/C		Red	LAY5-EH142
	N/O+N/C		- Black - Green - Red	LAY5-EH125 LAY5-EH135 LAY5-EH145
Even button spring return	N/O		- White - Black - Green - Yellow - Blue	LAY5-EA11 LAY5-EA21 LAY5-EA31 LAY5-EA51 LAY5-EA61
Even button spring return	N/C		Red	LAY5-EA42
Push button spring return	N/O+N/C		- White - Black - Green - Yellow - Blue	LAY5-EA15 LAY5-EA25 LAY5-EA35 LAY5-EA55 LAY5-EA65
	N/O+N/C		Red	LAY5-EA45
Even button (Atansparent silica gel cover) Unmarked IP65	N/O		- White - Black - Green - Yellow - Blue	LAY5-EA11 LAY5-EA21 LAY5-EA31 LAY5-EA51 LAY5-EA61
Even button (Atansparent silica gel cover) Unmarked IP65	N/C		Red	LAY5-EP42



LAY5-EA3311

 Even button
spring return N/O
With symbol logo



● Green I

LAY5-EA3311


● Green II

LAY5-EA3361



LAY5-EA3351

 Even button
spring return N/O
With symbol logo



● Black ↑ or ↓

LAY5-EA3351

○ White ↑ or ↓

LAY5-EA3341



LAY5-EA4322

Even button
spring return N/C
With symbol logo



● Red

LAY5-EA4322


● Red stop

LAY5-EA4342



LAY5-EA5331

 Even button
spring return N/O
With symbol logo



● Green start

LAY5-EA5331

● Black start

LAY5-EA5321



LAY5-EL42

Even button
spring return N/O
With symbol logo




● Red

LAY5-BL42



LAY5-EL3361

 Even button
spring return N/O
With symbol logo



● Green I

LAY5-EL3311

● Green II

LAY5-EA3361